


Go any where
Do anything
Never run out
of energy

It's an open and shut case for

PowerStarGO

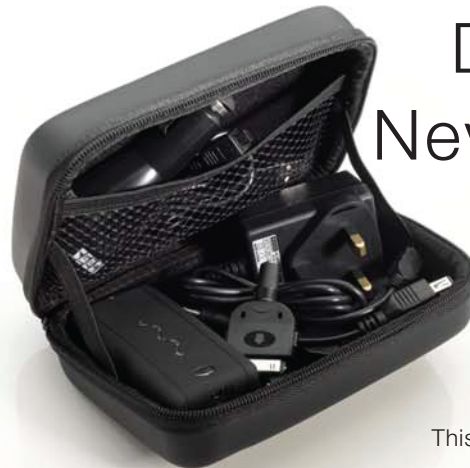

This little case holds the key to power at home, at work, on the move, in fact anywhere you need it! Charge the **PowerStar GO** from the mains, a PC or in-car and use the range of supplied connectors to power all your devices again and again - anytime and anywhere!



Power your PDA for up to 96 hours*



Power your mobile phone for up to 192 hours*



Listen to up to 80 hours* music on your MP3 player



Get up to 10 hours* gaming from your hand-held console



All the power you'll ever need
- right in the palm of your hand!

*All charge times are dependant on use, battery size and the general condition of your battery.

Mains charge



USB charge



Car charge



What do you get?

- PowerStar Go portable charger
- 7 appliance connectors
- AC power adaptor
- USB female cable
- Car charger
- Nintendo DS cable
- USB cable
- Sturdy travel case
- Connecting cable



30PD40WC PowerStar GO Multi-purpose universal portable charger

- Compatible with the majority of mobile phones, digital cameras* portable gaming consoles, iPod, MP3/MP4 players, Sat Nav, PDAs and so much more
- The perfect companion for everyday use & people on the move. Use for day trips out, long distance travel, business trips and so much more - just keep in your bag ready for when you need it
- Reusable portable charger for, everyday use, emergencies or as your travel power solution
- Over 1 years standby charge
- Stores up to 16 hours of talk time (based on mobile phone with 850mAh battery)
- Duo charging technology enables charging of the portable charger and your device simultaneously
- One touch power level checker and discharge function button
- Charging status indication
- Light weight and compact design

* Only suitable for charging digital cameras which have an in-built charging system and battery charging indicator. Cameras without an in-built charging system will use the Power star Go! as a portable energy source.

Included Tip Specification

| Tip | Compatibility |
|---------------------------------|--|
| Sony Ericsson Wide Connector | Sony Ericsson W series, J100, K750, K800, M600, P990, Z520, Z530i, Z710. Headset HBH-GV435 |
| Mini USB | Benq P50, Mitac Mio A700, A701, C210, C310, C710, P350, P550, Blackberry, Dopod PDA 565, 575, 585, 818, 828, 838, 900, Gamin Nuvi GPS, Forerunner 205, 305, 310, 350, 360, 370, 660, 670, 680, HP iPAQ 6818, 6828, 4540, 4545, 5765, i-Mate Jam, JASJAM, JASJAR, K-JAM, SP3, SP3i, SP5, SP5m, Mio Digi Walker 168, 268, 269, 269+, 336BT, 336g, 336i, 339, 8390, 8870, A201, A701, C510E, C710, P350, P550, Motorola RAZR Series, L2, L6, L6g, SLVR L7, M300, KRZR K1m, A1200, A668, A70, A732, A780, C305, C362, V235, PEBL, E680, E680i, T193, U6, V360, C362, C305, C363, V320, V191, E2, MotorolaQ, E770v, ROKR Z6, Maxx V6, Maxx Ve, RIZR V3, V3i, Bluetooth H3, H350, H500, H650, H700, RAZRWIRE Mercury, Gray, Pewter, Black Iridium, O2 XDA, Xphone PDA, Orange M3100, SPV PDA series, T-mobile SDA-11, TomTom One XL GPS, Vodafone V1640, V2140, VPA, |
| iPod | iPod 3rd, 4th and 5th Generation; iPod Mini, iPod Nano, iPod Photo, iPod Video, iPhone |
| Small Pin (NK95) | Canon Powershot A300, Fuji Powershot A310, Finepix 4700, Nokia N70, N71, N72, N73, N75, N80, N90, N91, N92, N93, N95, XpressMusic, |
| Standard Connecting Cable (NK1) | Nokia 3 Series, 6 Series, Samsung Digimax U-CA3, Digimax V3, Digimax V4, Digimax 350SE, Digimax 230, Digimax 340, Digimax 370, Digimax 410, Digimax 301, Digimax CYBER3, Digimax ViVi 2800 |
| PSP | Canon 750, V3, A620, A610, A95, A80, A85, A60, A70, A75, Casio EX-Z40, S3, S3000, S5000, EX-230, EX240, Creative MuVo 2, MuVo2 FM, Zen, Zen PMC, Zen Sleek, Zen Touch, Zen Vision, Dell Axim X3, Axim X5, Fuji FinePix S9500, S7000, S5500, S5600, S5000, S6500, S30000, S602 S304, S20pro, AS10, AV50, LC33, LC43, Kodak V530, V803, DX6490, CX6200, DX7630, DX7440, LS743, LS443, LS663, CX7430, Nikon EX-230, EX240, Olympus C-450 zoom, C-310, U300, C-5060, U-10D, D-15D, D-20D, D-25D, D-30D, D-300D, D-400D, D-410D, X-1, X-2, X-3, AZ-1, C-50Z, C-60Z, Panasonic LC50, LC70, FZ10, LC1, AV25, AV50, LC33, LC43, RICOH Digital Camera PR1, PR10, PR120, RDC-2, RDC-2E, 300, 300E, 4200, 4300, 5000, 5300, 6000, 7, i500, i700, Samsung Media Player YH-999, Sony PSP, Tomtom, Mobile Bluetooth, GPS |
| Ss680 | Samsung NV10, NV30 digital cameras |
| NDS | Nintendo DS |
| NDSLII | Nintendo DS Lite |
| USBF | MP3/MP4 or any device with own USB charging cable |

PowerStar Go main unit

Capacity: 4800 mAh

Input voltage: 5VDC 700mA, 1200mA peak

Output Voltage: 5.3VDC max.

Output Max Current: 700mA

AC adapter

Input voltage: 100-240VAC, 50/60Hz

Output: 5.5VDC 0.7A

Car charger

Input voltage: 12-24VDC

Output : 5VDC 1A

Guide to individual device charge times

| Device | Charge times |
|-----------------------------|--|
| Nokia N95 | charge 3-4 times (1200mAh battery) |
| iPod | charge over 15 times (350mAh battery) |
| iPhone | charge 2-3 times (1400mAh battery) |
| Motorola V3 | charge up to 4 times (810mAh battery) |
| Sony Ericsson K750 | charge 4-5 times (700mAh battery) |
| Samsung NV10 Digital Camera | charge up to 4 times (900mAh battery) |
| Sony PSP | charge 2-3 times (1600/1800/2200mAh batteries) |
| Nintendo DS/DS Lite | charge 2-3 times (1600/2000mAh batteries) |

*All charge times are dependant on use, battery size, battery type and the general condition of your battery.

